


**Thermal & airtightness continuity of wall insulation at intermediate floors – e.g. southwest corner**

Plaster layer over Spacetherm, all board joints taped as well as over every fixing

Plasterable tape (Proclima Contega) from membrane to Spacetherm before plastering Spacetherm boards

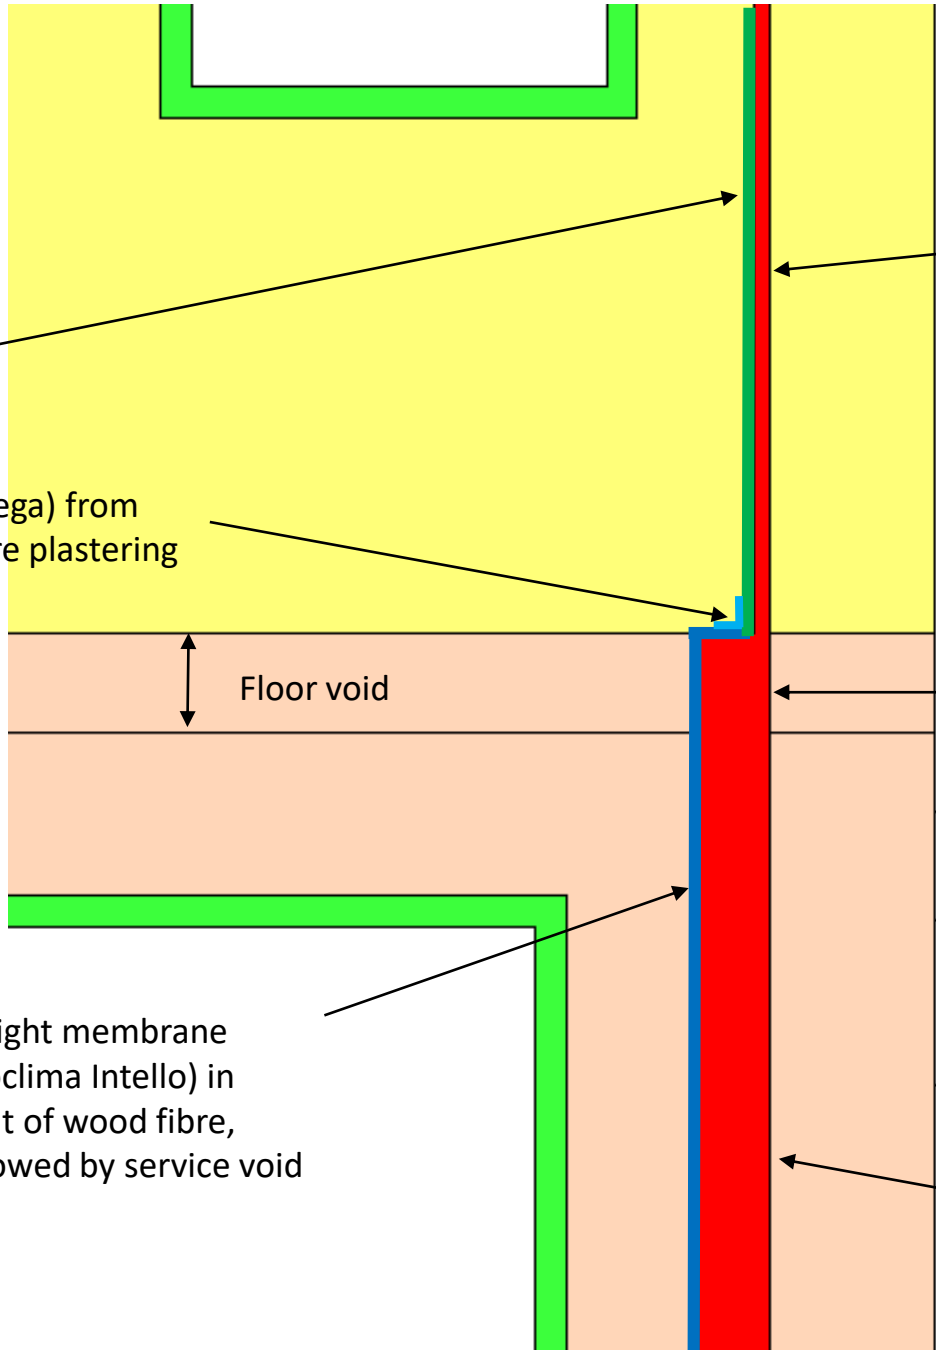

Spacetherm Wallboard with 20mm Aerogel

Wood fibre spans floor void to link up with Spacetherm

Wood fibre 100mm

Airtight membrane (Proclima Intello) in front of wood fibre, followed by service void

Floor void