


# Airtightness strategy

Intello membrane

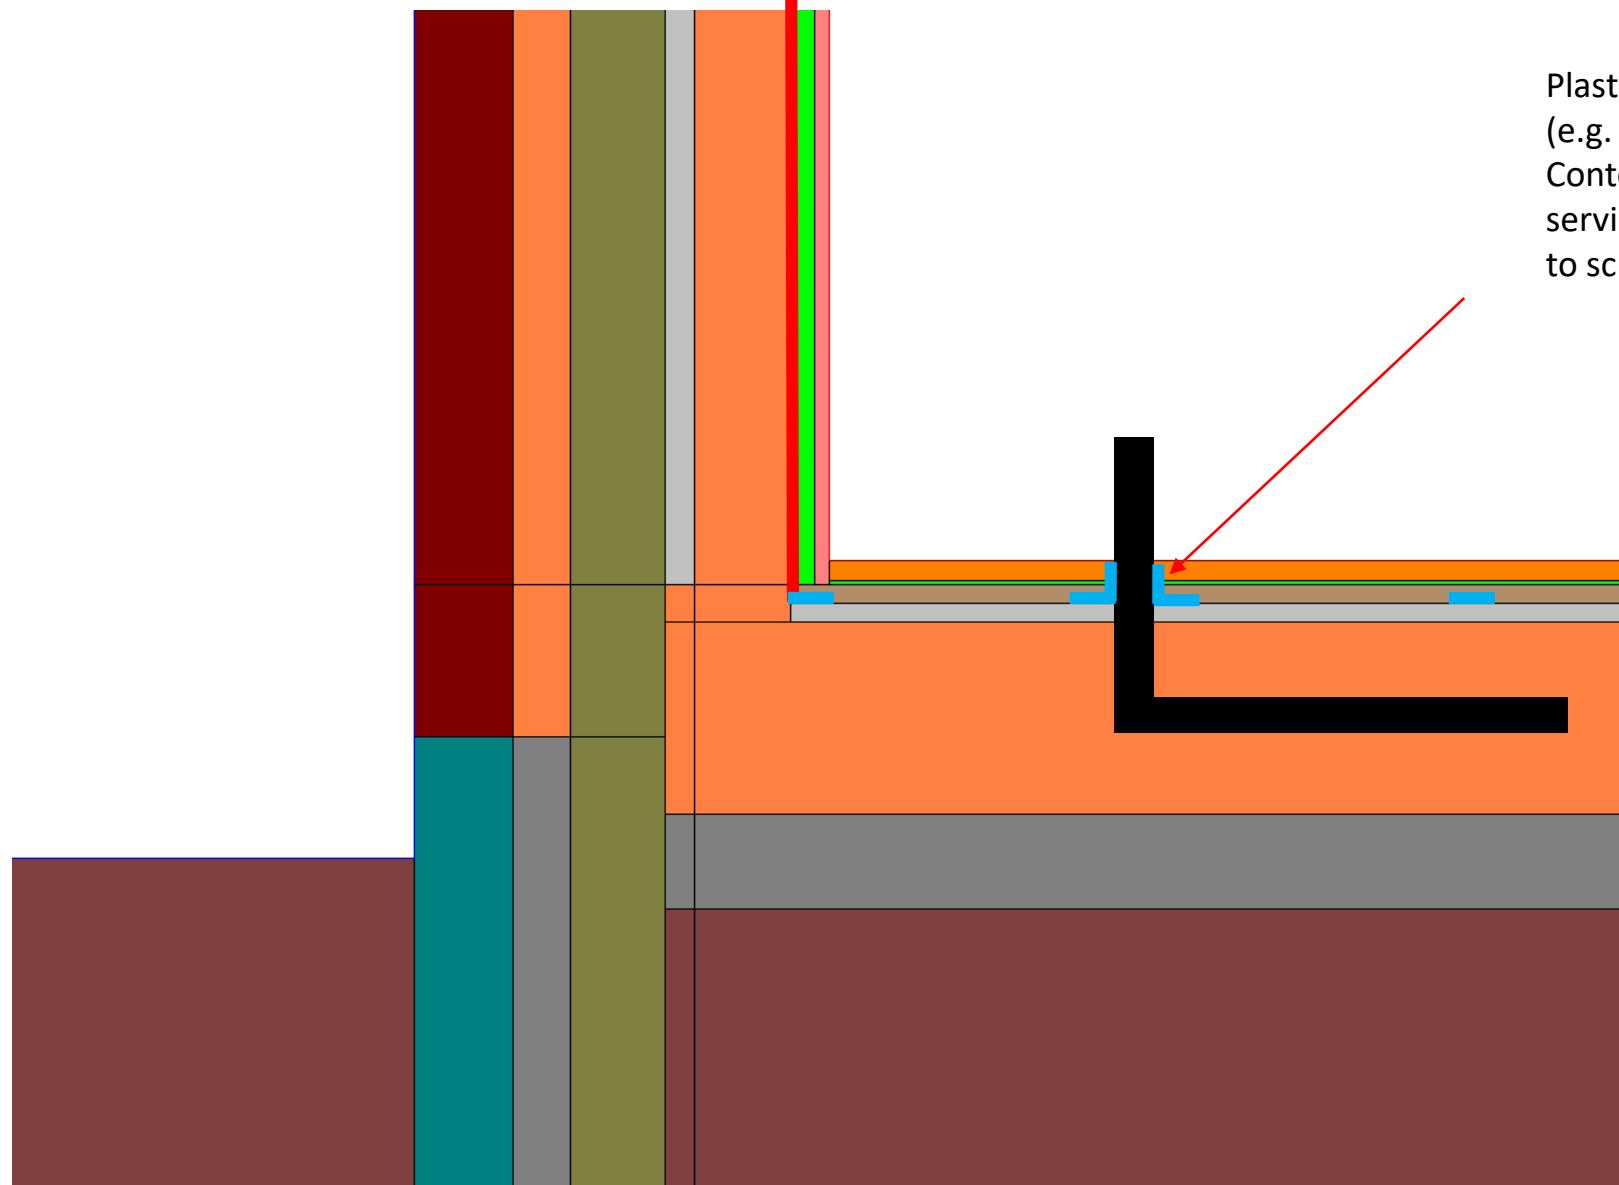

Plasterable tape  
(e.g. Proclima  
Contega) from  
service penetration  
to screed